

Shelti[™] Bayside

Coin Operated Pool Tables

Model # 85P-88-AA, 85P-88-CA, 85P-93-AA, 85P-93-CA, 85P-101-AA, 85P-101-CA


Assembly Instructions

Thank you for purchasing a Shelti product. All of us at Shelti want you to be completely satisfied with your Coin Pool Table, so feel free to contact us for help with the assembly of your product, Shelti parts, or other information you may require.

Tools Required:

5/16" Wrench or Socket Level

<u>Description</u>	Part Number	Quantity
Shelti Pool Table Leg Box	LBA-0	1
Pool Table Leg Assembly	PX-LAA-0	4
Pool Table Leg	201-0053-0	4
Square Base T-Nut 1 3/8"x1 3/8"	305-0010-0	4
#8 x 1 1/4" Pan Phil Tap Screw	304-0002-0	4
Leg Leveler - Brushed Aluminum	204-0035-0	4
Leg Bolts - 5/16-18x1 1/2"	301-0020-0	12
Ball Set - With Magnet Cue Ball	213-0001-0	1
Ball Rack Triangle	201-0060-0	1
Pool Table Chalk	210-0047-0	6
Pool Table Warranty Card	210-0063-0	1
8° Coin Pool Table Assembly Instructions	210-0158-0	1

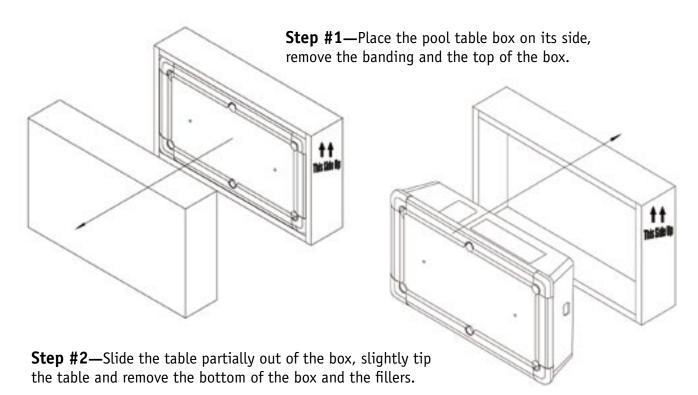


Step #3—Attach the legs to the bottom of the pool table using three 5/16"-18 leg bolts per leg. Make sure that the leg levelers are screwed all of the way into the leg and slowly rotate the table over onto its four legs. **Step #4**—Rough level


the pool table by placing a level across, lengthwise, and diagonally into the four corners and raise or lower the appropriate leg leveler. Final level the pool table by dropping a ball onto the nose of the cushion rail and watch the drift of the ball as it comes to a stop. Raise or lower the appropriate leg leveler until the ball rolls true.

Step #5—Complete the warranty card and return the self-mailing Registration Form to Shelti in the event of upgrades and/or product recalls.


Maintenance Adjustments

Top Rail Molding Removal / Installation:

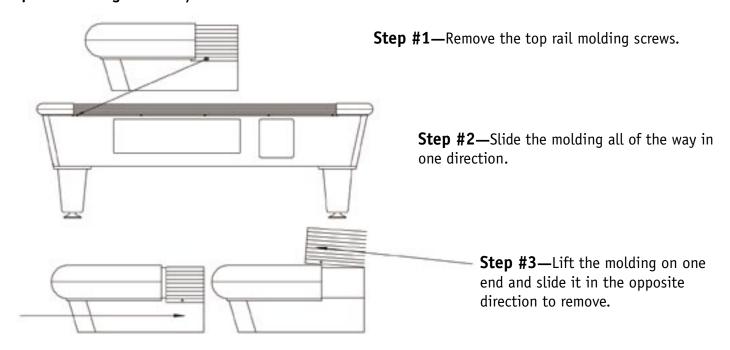


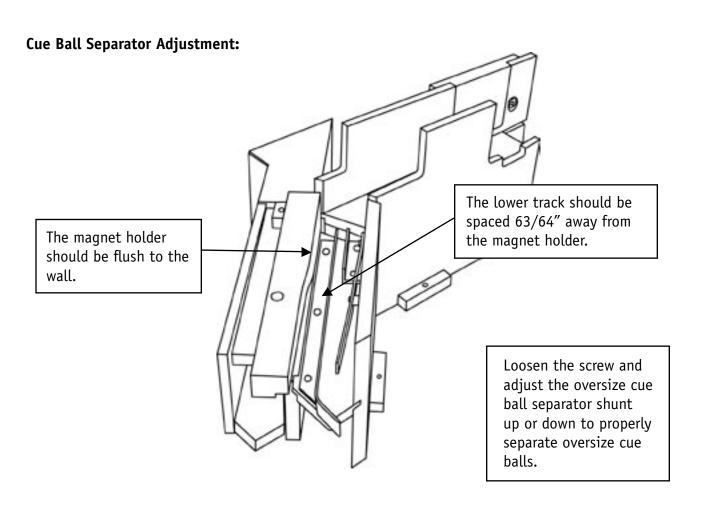

Ball Trap Removal & Upper Ball Wedge Replacement:

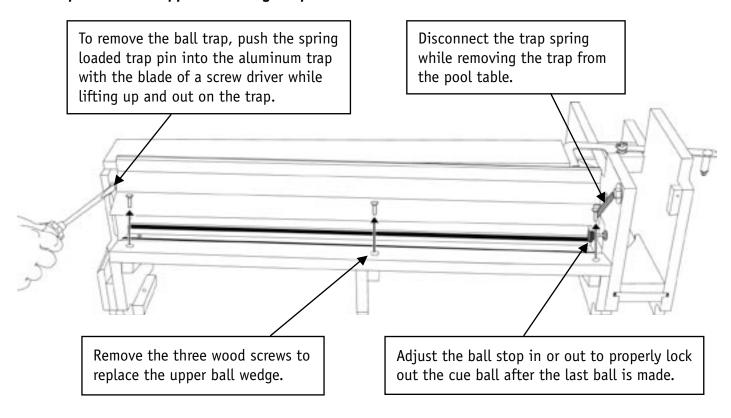



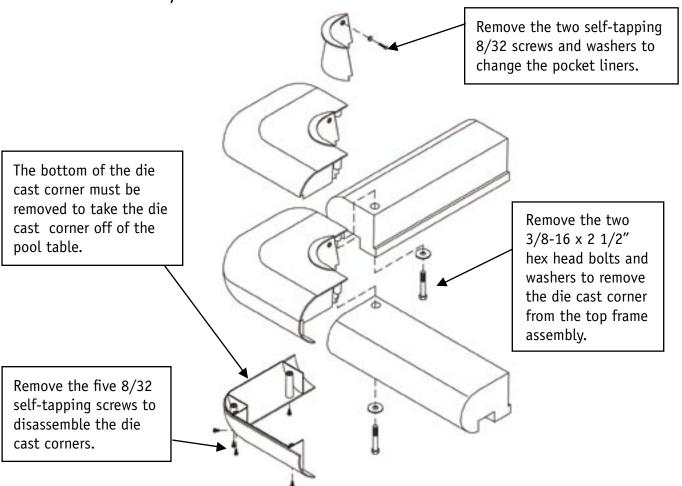

Ball Trap Cam Removal / Adjustments:

